# **Panasonic**

**Proprietary Telephone** 

## Quick Reference Guide

Model No. KX-T7735

## Important Information

Thank you for purchasing the Panasonic Proprietary Telephone, KX-T7735.

When using the KX-T7735, keep the following conditions in mind.

- If you are having problems making calls, unplug the extension line and connect a known working telephone. If the known working telephone operates properly, have the defective telephone repaired by an authorised Panasonic Factory Service Centre. If the known working telephone does not operate properly, check the KX-TE or KX-TDA series and the extension wiring.
- Keep the unit away from heating appliances and devices that generate electrical noise, such as fluorescent lamps, motors and televisions. These noise sources can interfere with the performance of the unit.
- This unit should be kept free of dust, moisture, high temperature (more than 40 °C) and vibration, and should not be exposed to direct sunlight.
- Wipe the unit with a soft cloth. Do not clean the unit with abrasive powders or with chemical agents such as benzene or thinner.
- Use only the correct Panasonic handset.
- Do not disassemble this product. Dangerous electrical shock could result. The unit must only be disassembled and repaired by qualified service technicians.
- When a failure occurs which exposes any internal parts, disconnect the telephone line cord immediately and return the unit to a service centre.
- Never attempt to insert wires, pins, etc, into the vents or other holes of this unit.

#### WARNING:

TO PREVENT POSSIBLE FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE. THIS HANDSET EARPIECE IS MAGNETISED AND MAY RETAIN SMALL FERROUS OBJECTS.

DISCONNECT THE TELEPHONE LINE CORD FROM THIS PRODUCT IF THIS PRODUCT EMITS SMOKE, AN ABNORMAL SMELL OR MAKES UNUSUAL NOISE. THESE CONDITIONS CAN CAUSE FIRE OR ELECTRIC SHOCK. CONFIRM THAT SMOKE HAS STOPPED AND CONTACT AN AUTHORISED SERVICE CENTRE.

#### **IMPORTANT NOTICE:**


• Under power failure conditions, this telephone may not operate. Please ensure that a separate telephone, not dependent on local power, is available for emergency use in emergencies.

#### Notes:

- In this manual, the suffix of each model number is omitted.
- For further information, refer to the Main Unit/PBX Manuals.


Outside (CO) Line button Off-hook On-hook Feature number (CO) Line button Off-hook Talk


<b>Desired Function</b>	Operation			
	Making Calls			
Calling	To an extension  To an external party  Extension no. ► ((())  To an external party  phone no. ► ((())			
Redial	> REDIAL ► C(n/2)			
One-touch Dialling	To program  PROGRAM  PROGRAM  PROGRAM  PROGRAM  STORE  PROGRAM  PROGRAM  PROGRAM  PROGRAM			
	To dial  assigned as a One-touch dialling button			
Calling an operator	<b>&gt;</b> ► 0 / 9 ► <b>(</b> (.\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\			
Speed Dialling (Personal)	To set    X   KX-TE series     X   3   0   KX-TDA series     (Check the type of your Main Unit.)			
	To dial    KX-TE series			
Speed Dialling (System)	To dial  AUTO DIAL  System speed dial no. ► ((())  System speed dial no. ► (())			
Receiving Calls				
Hands-free answerback	While on-hook AUTO ANS MUTE			

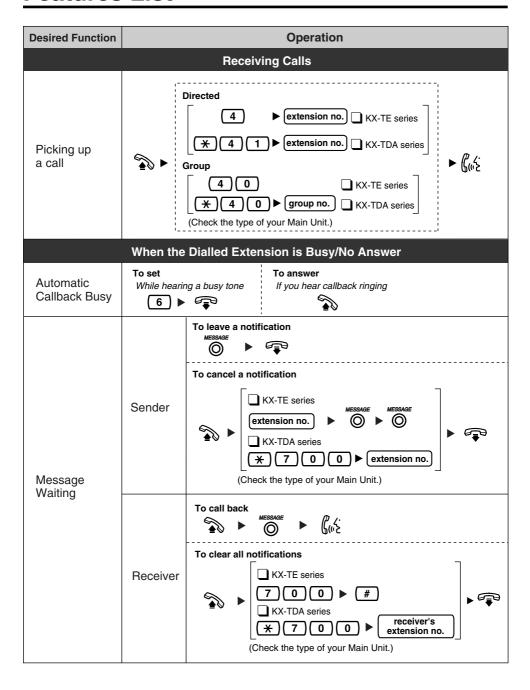

<b>Desired Function</b>	Operation					
	When the Dialled Extension is Busy/No Answer					
Call Waiting	Sender	While hearing a busy tone  2				
	Receiver	KX-TE series   For outside calls				
		To talk to the new party (While hearing the Call Waiting tone)  Terminating a current status Holding a current status (outside call)  HOLD  HOLD  MITERCOM  MITERCOM				
		Holding a current status (extension)  HOLD  ト  (()				

Desired Function	Operation				
During a Conversation					
Holding a call	Holding  HOLD  HOL				
	To retrieve an outside call from another extension  ▶ □ □ ▶ □ □ ▶ □ □ □ □ □ □ □ □ □ □ □ □				
Holding a call exclusively	Holding  HOLD  HOL				
Transferring a call	to an extension  co phone no. to an external party  Announce.				
	Useful Features				
Paging	To page  All extensions  3 3 0 KX-TE series  Group  3 3 group no. KX-TE series  ** ** ** ** ** ** ** ** ** ** ** ** **				
Three-party conference	third party's no.				

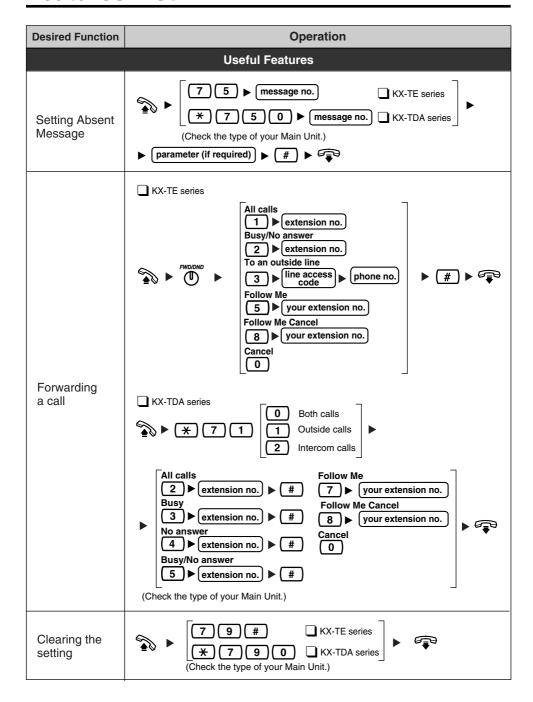


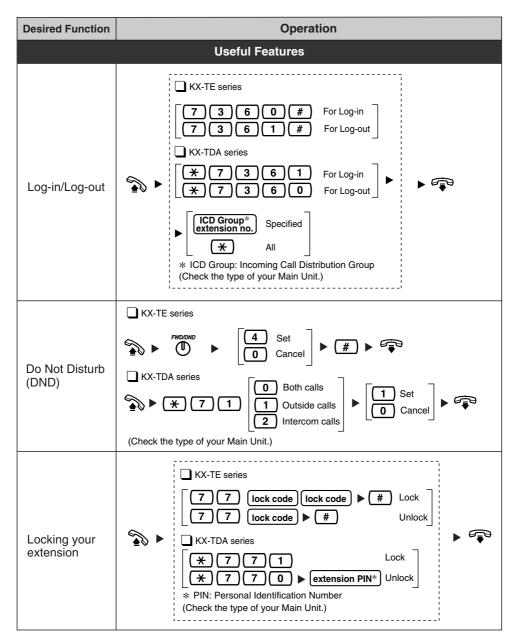

- \* Consult your dealer for more details about the feature access numbers.
- \* Some feature access numbers may be different in each market. Please consult your local dealer for the details.

## **Location of Controls**

#### RINGER Volume Selector/ BACKLIGHT Illumination Selector

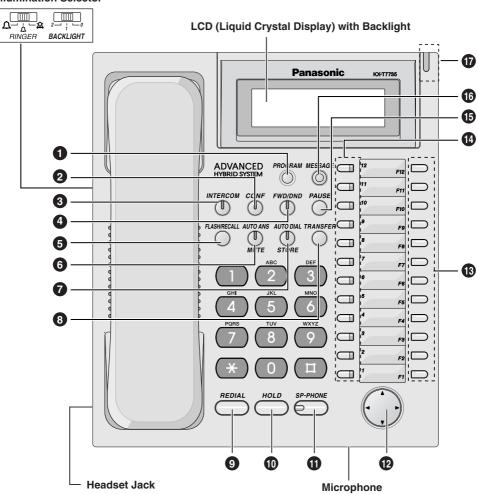

\* Headset (not included)

Recommendable: KX-TCA87, KX-TCA89

Not available: KX-T7090

### Location of Controls

- **PROGRAM:** Used to enter and exit the programming mode.
- CONF (Conference): Used to establish a multiple party conversation.
- 3 INTERCOM: Used to make or receive intercom calls.
- FWD/DND (Call Forwarding/Do Not Disturb): Used to perform Call Forwarding or Do Not Disturb.
- **5** FLASH/RECALL: Used to disconnect the current call and make another call without hanging up.
- 6 AUTO ANS (Auto Answer): Used to receive an incoming call in the hands-free mode.

**MUTE:** Used to mute the microphone during a conversation.

- **7 AUTO DIAL/STORE:** Used for speed dialling or storing program changes.
- **8 TRANSFER:** Used to transfer a call to another party.
- 9 REDIAL: Used to redial.
- 10 HOLD: Used to place a call on hold.
- **SP-PHONE:** Used for the hands-free operation.
- (2) NAVIGATOR KEY: Used to adjust the volume and the display contrast or select desired items for each function.

- Programmable Feature (PF) Button:
  Used as an One-touch Dialling button
  (Button assignment is required).
- Flexible Outside (CO) Line Button:
  Used to make or receive an outside call.
  Pressing this button seizes an idle outside
  line automatically. (Button assignment is
  required.) Also used as the desired
  function buttons. (Button assignment is
  required.)
- **PAUSE:** Used to insert a pause during dialling.
- MESSAGE: Used to leave a message waiting indication or call back the party who left the message waiting indication.
- Message/Ringer Lamp: The Message/ Ringer lamp informs you visually that you have a message or a call.
  - When you receive a call, the lamp flashes depending on the ringing pattern.
     When someone has left you a message, the lamp is lit continuously.
  - When the ringing pattern is set to Single (Slow flash), Double (Moderate flash), or Triple (Rapid flash) in your PBX, the lamp flashes. When the other ringing patterns are set in your PBX, the lamp may not flash (e.g., S-Double, Call Waiting Tone1).

## Before Operating the Telephone

### ◆ Speaker/Handset/Headset volume \*

#### Speaker volume

While in hands-free conversation

#### Handset/Headset volume

While using the handset or headset



Press **Up** (Level increases) or **Down** (Level decreases).

### ♦ Ringer volume/Backlight illumination

While in on-hook or receiving a call



Slide the lever of the **RINGER** Volume Selector to the desired setting (**HIGH/LOW/OFF**).



BACKLIGHT

Slide the lever of the **BACKLIGHT** Illumination Selector to the desired setting.

BACKLIGHT SW POSITION	2	1	0
LCD backlight	HIGH	LOW	OFF

### ◆ Display contrast \*


While in on-hook or receiving a call



Press Left (Light) or Right (Dark).


\* The above settings may return to default settings if the telephone line cord is disconnected or the main unit's power is interrupted.

### Connection

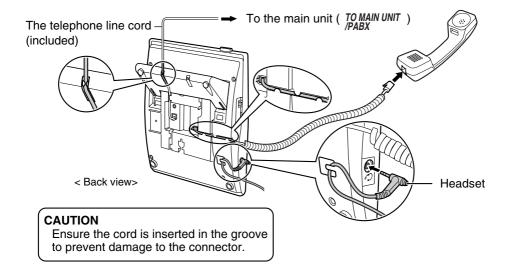


## Wall Mounting


1 Pull down the handset hook until it locks, so the tab holds the handset.

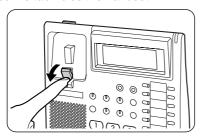

2 Remove the attached stand.

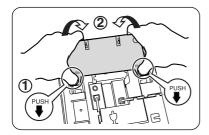


3 Mount the unit on the wall.

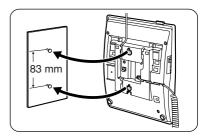

To temporarily place the handset down during a conversation,

hook it over the top edge of the phone as shown.

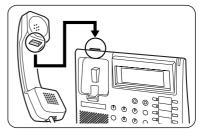

### Information

### Information for Users on Collection and Disposal of Old Equipment and used Batteries



These symbols on the products, packaging, and/or accompanying documents mean that used electrical and electronic products and batteries should not be mixed with general household waste.

For proper treatment, recovery and recycling of old products and used batteries, please take them to applicable collection points, in accordance with your national legislation and the Directives 2002/96/EC and 2006/66/EC. By disposing of these products and batteries correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling.

For more information about collection and recycling of old products and batteries, please contact your local municipality, your waste disposal service or the point of sale where you purchased the items.

Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

#### For business users in the European Union

If you wish to discard electrical and electronic equipment, please contact your dealer or supplier for further information.



Information on Disposal in other Countries outside the European Union These symbols are only valid in the European Union. If you wish to discard these items, please contact your local authorities or dealer and ask for the correct method of disposal.



#### Note for the battery symbol (bottom two symbol examples):

This symbol might be used in combination with a chemical symbol. In this case it complies with the requirement set by the Directive for the chemical involved.



This product is intended to be connected to Panasonic KX series PABX only.

For information of Compliance with EU relevant Regulatory Directives,

Contact to Authorised Representative: Panasonic Testing Centre Panasonic Marketing Europe GmbH Winsbergring 15, 22525 Hamburg, Germany

### **Panasonic Corporation**

1006, Oaza Kadoma, Kadoma-shi, Osaka 571-8501, Japan