

How to update F/W via WEB in LAN

(KX-HDV230/330/430)

No. 02-001

Aug 31 , 2016

Ver.1.1

Panasonic Corporation

Abstract about this document

This document describe about how to update F/W via WEB in LAN.

Revision history

Date	Version	Revision	Firmware version
Nov. 20, 2015	Ver. 1.0	Initial Release	All versions
Aug. 31, 2016	Ver.1.1	KX-HDV430 is added.	All versions

1. Connect to Web UI

1-1. Connect the Phone and a PC to the network.

1-2. Check the IP address of the phone using the phone.

HDV230 [Menu]->[System Settings]->[Status]->[IPv4 Settings] ->[IP Address]

HDV330/430 [HOME]->[System Settings]->[Status]->[IPv4 Settings]

1-3. Enable the phone's Web UI using the phone.

HDV230 [Menu]->[Basic Settings]->[Other Option]->[Embedded Web]->[On]->[OK]

HDV330/430 [HOME]->[Basic Settings]->[Other Option]->[Embedded Web]->[On]->[OK]

1-4. Enter the IP address in a PC's Web Browser.

example: Enter "http://192.168.1.68" in the address bar of Internet Explorer

1-5. Enter Authentication ID and password

ID:admin


Password:adminpass

1-6. Now you can upload new Firmware into the phone using Web browser.

Note: The phone's http server port will be closed after idle time of 30 minutes.
In such case, please repeat the same procedure to re-open the http port.

2. Update Firmware (HDV230)

- 2-1. Move to [Maintenance] -> [Upgrade Firmware] menu.
- 2-2. Select Firmware file on your PC. (example: KX-HDV230*****.fw)
- 2-3. Click [Update Firmware]
- 2-4. Please wait until the firmware update is complete.
The unit will reboot automatically.

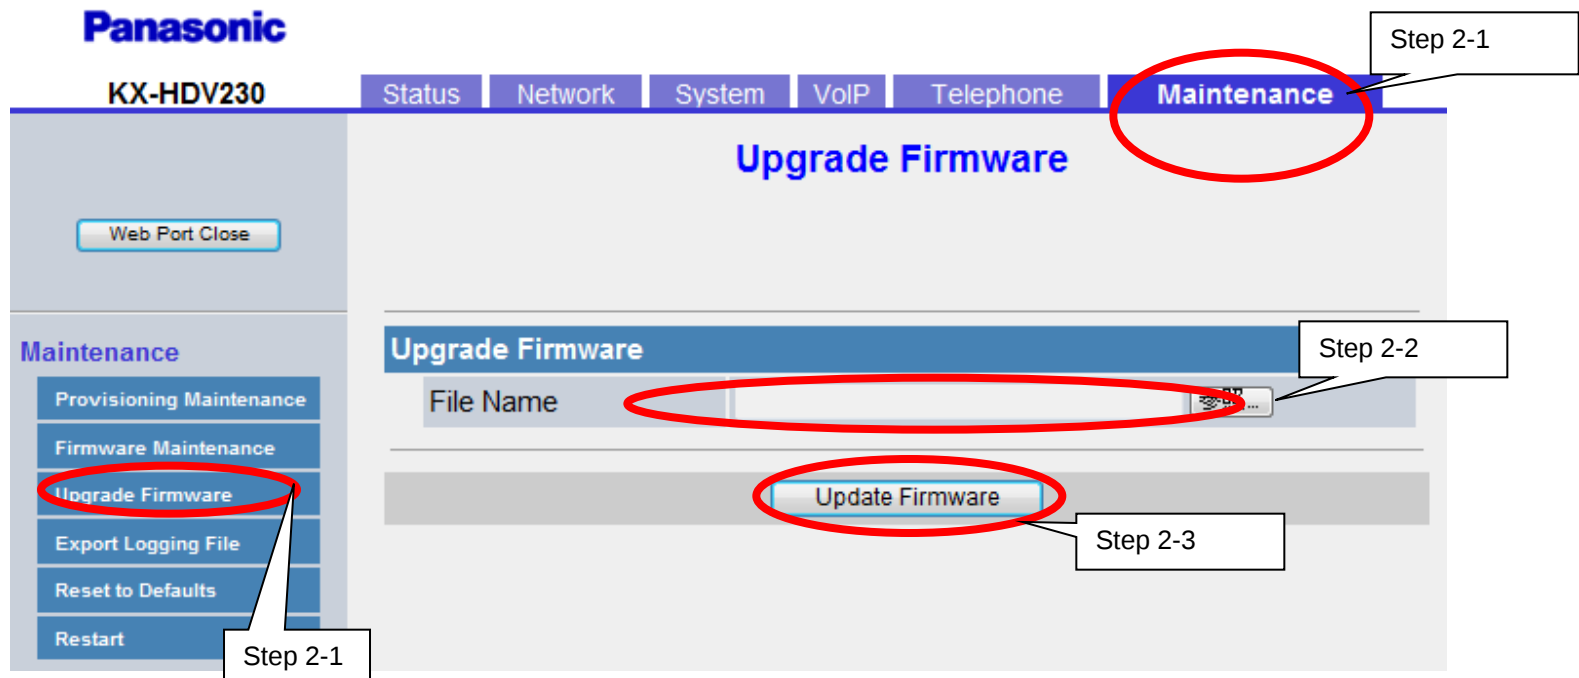

2. Update Firmware (HDV330/430)

- 2-1. Move to [Maintenance] -> [Firmware Maintenance] menu.
 - 2-2. Enter a URL in [Firmware File URL].
(example: <http://firm.example.com/firm/HDV330-xx.yyy.fw>)
 - 2-3. Enter a Version in [Firmware Version].
(example: xx.yyy)
 - 2-4. Click [Save]
 - 2-5. The unit start update firmware after click.
 - 2-6. The unit will reboot after the firmware update is complete (about 3min later).
- Note:

You can use an HTTP server as the firmware server by simply setting its URL.

