

Character input timeout

23th June 2020
Rev 1.0

Revision history

Date	Revision	Changes
23 th June 2020	Rev 1.0	Initial Release

Support Model

TGP700	TGP600	HDV130	HDV230	HDV330	HDV340	HDV430
All version	05.000 or later	05.000 or later	05.000 or later	05.003 or later	All version	05.001 or later

AUTO_INPUT_KEY_TIME is set to "1", "2" or "3" in your configuration file. And then character input timeout is enabled for any cases such as editing label name, searching name in phonebook etc.

The input cursor position moves to the next automatically according to the timeout setting. You don't need to press "-> (right key)" to input next character even when inputting the same character continuously.

e.g. You'd like to input "aa".

AUTO_INPUT_KEY_TIME="0" (timeout is disabled)

After inputting first "a", you need to press "-> (right key)" in order to input second "a".

Without pressing "-> (right key)", the input cursor position doesn't move to the next.

AUTO_INPUT_KEY_TIME="1" (1 second timeout is enabled)

After inputting first "a", you don't need to press "-> (right key)" but just wait for 1 second in order to input second "a".

Parameter Name	Value Range	Default Value	Description
AUTO_INPUT_KEY_TIME	0 - 3 [0 : off]	0	Specifies the number of seconds after which the cursor automatically moves to the next position during character input.