

# About Manual Pairing on Coaxial-LAN Converter

April, 2016

Panasonic System Networks Co., Ltd.  
Security System Business Division

**This document describes about the function of Manual Pairing which has been added on the firmware version 1.031fM for the Coaxial-LAN Converter (Models: WJ-PR201 and WJ-PR204).**




Please refer to the operating instruction manual for the specifications of the products.

You can download the operating instruction manuals at;  
<http://security.panasonic.com/download/>

## <Symptom>

Receiver side searches camera side and make pairing automatically, however, it may fail depends on the environment. In the case, you will see a solid black picture or jumpy pictures.

\*: Automatic pairing may fail when a receiver side unit that is connected to a long coaxial cable is operated together with other receiver side unit. Please use manual pairing when the receiver side unit cannot automatically pair to the camera side unit.

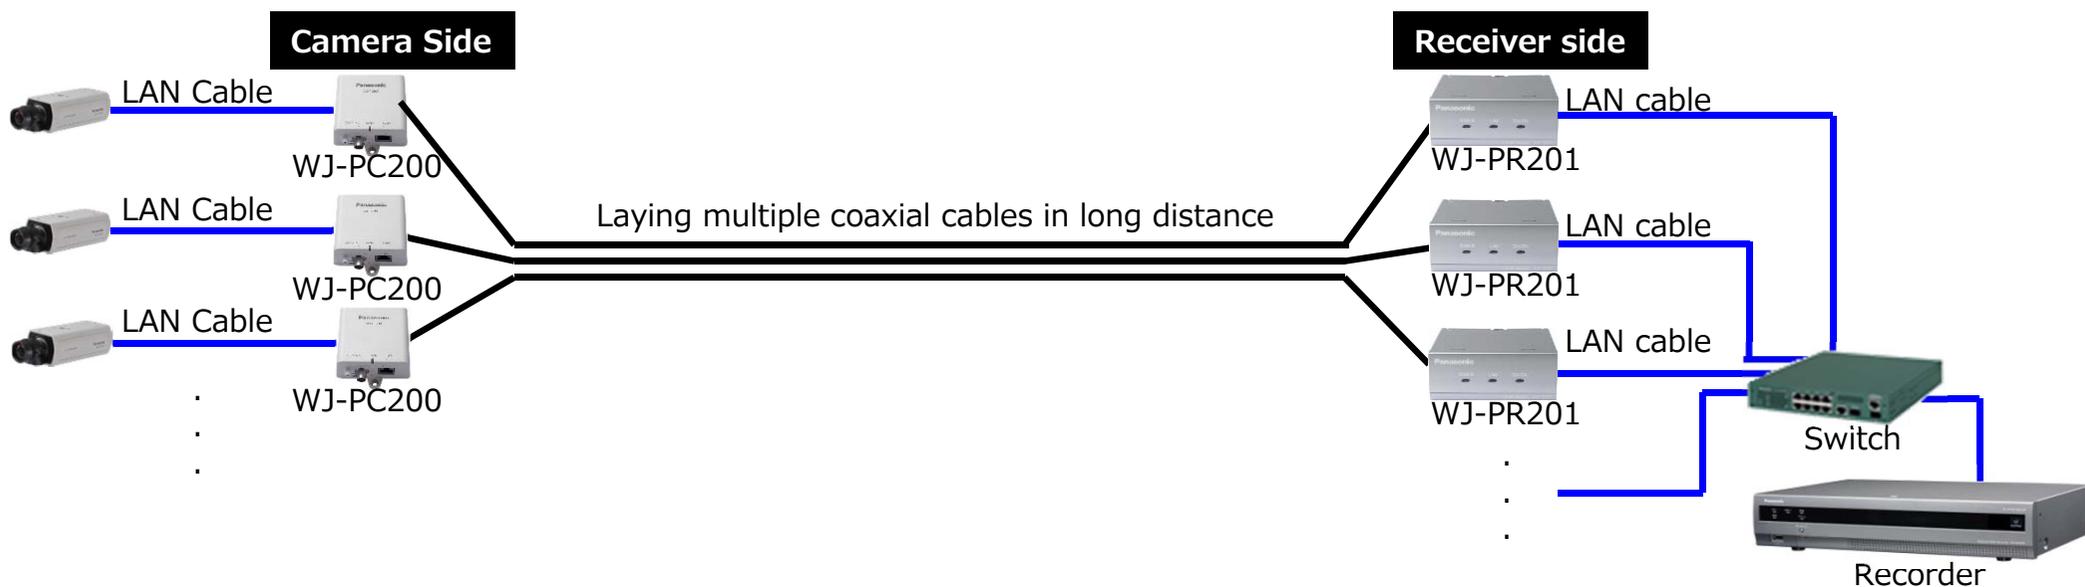



## <Manual Pairing Function> **Firmware version 1.031fM and newer.**

The function has been added so that the camera side unit to be connected to can be manually specified.

## <Temporarily Changing the PC's IP Address>

Temporarily change the IP address assigned to your PC to access the coaxial-LAN converter's maintenance screen. (Ex. The following describes how to change on Windows7.)

1. Click "Start", "Control panel", then "View network status and tasks".
2. Click "View your active networks" and "Local Area Connection".
3. Click "Properties" button on Local Area Connection Status.
4. Select "Internet Protocol Version 4 (TCP/IPv4)" [1], then click "Properties" button [2].
5. Select "Use the following IP address" [3], key-in IP address [4] and Subnet mask [5], then click "OK" button [6].  
\*: If an IP address has already set, make a note of the current IP address and other settings so that you can return the PC to those settings afterwards.
6. Click "Close" button [7] to exit the "Local Area Connection Properties" screen.

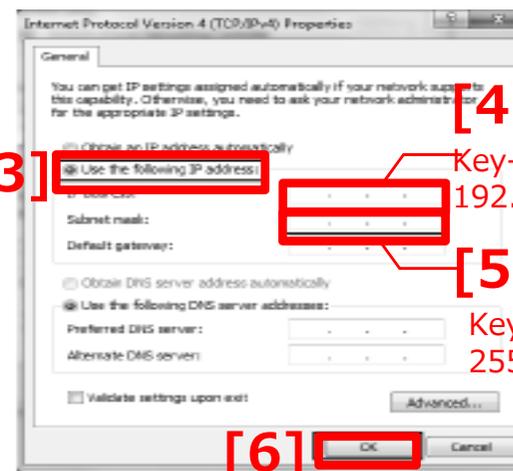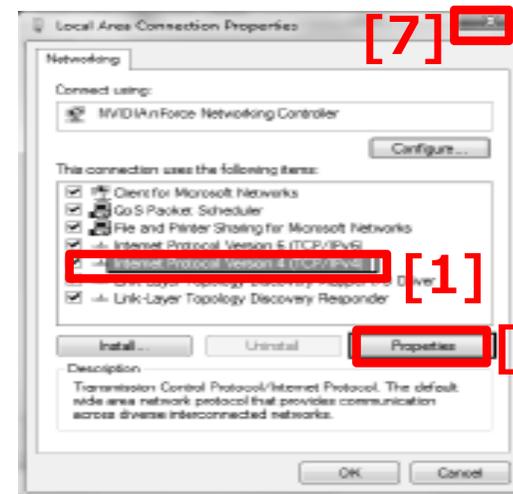

Key-in [192.168.249.\*\*\*]  
The "\*\*\*" means ranging from "1" to "254".  
Key-in an any number except IP address for receiver side unit (For your information: its factory default is "249").


## <How to configure manual pairing>

This describes how to configure manual pairing the camera side unit with the receiver side unit.

1. Turn off the power for all receiver side units.  
\*: Keep connection between receiver side units and camera side units by coaxial cables.
2. Turn on the power of the receiver side unit that is to connect with the camera side unit.
3. Connect the receiver side unit with your PC by Ethernet cable.
4. Run web browser on your PC and key-in the IP address of the receiver side unit.  
Ex: Key-in http://192.168.249.249 at address bar if the IP address were factory default.
5. Key-in the user name and password, then click "OK" button.

Model no.	User name	Password
WJ-PR204	WJ-PR204	999999
WJ-PR201	WJ-PR201	999999

6. Make sure the firmware version 1.031fM (or newer) [1].  
Please refer to the page 10 for upgrading it if it were older than version 1.031fM.

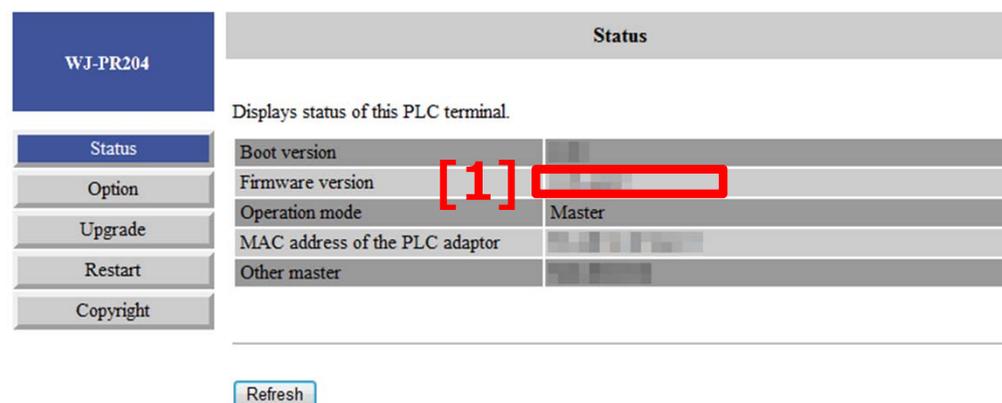

Ex. Connecting 3 units of WJ-PC200 with WJ-PR204.

**Note: Turn off the power for all receiver side units except the one to be set.**

7. Click "pairing". [2]
8. Make sure the number of MAC addresses those are for all connected camera side units. [3]
9. Select "Camera side unit set by following settings will be connected." [4]
10. Click "Add" button to the left of the MAC address of the camera side unit to be connected to. [5]
11. Click "OK" button if a dialog is displayed. [6]
12. Repeat the steps "10" and "11" to configure manual pairing for the other camera side units.

**Pairing Configuration**

If you use Pairing function, you can configure the camera side units to allow connection to the receiver side unit. Please select radio button. And if you allow specified camera side units, please register the camera side units.

[Pairing Configuration]機能を使用してカメラ側機とレシーバ側機のペアリングを固定することができます。  
[Camera side unit set by following...]にチェックを入れて、カメラ側機のMACアドレスを登録してください。

Note: When operating the "Back" or the "Refresh" button on the browser and clicking "Cancel" button, the settings while editing will be discarded.  
Note: Please separate six groups by hyphens "-", when Mac address is typed in. (e.g. BC-C3-42-\*\*-\*\*-\*\*)  
Note: Click the [Set] button to apply settings.

注: ブラウザの[戻る][更新]操作をしたり、[Cancel]ボタンをクリックすると、設定中の内容はクリアされます。  
注: MACアドレスを入力する際は、ハイフン“-”で区切って入力してください。  
(例: BC-C3-42-\*\*-\*\*-\*\*)  
注: 設定が完了したら、[Set]ボタンをクリックして設定内容を確定してください。

All detected camera side units will be connected automatically.  
 Camera side unit set by following settings will be connected. [3]

	Settings	Status	MAC Address
[5] Add	Not Registered	Connected	[3]
Add	Not Registered	Connected	[3]
Add	Not Registered	Connected	[3]
Add	-	-	

Set Cancel

? Add OK?  
When you click "Set" to restart this product, you can change the configuration.

[6] OK キャンセル

13. Make sure all of Settings for the connecting camera side units showing "Registering". [7]

14. Click "Set" button. [8]

15. Click "OK" button on the dialog. [9]

16. Click "Reset" button on "Pairing function" screen. [10]  
\*: The receiver side unit will be restarted automatically.


17. After restarting, click "Pairing", then make sure all of Settings for the connecting camera side units showing "Registered". [12] Also make sure "Camera side unit set by following settings will be connected." is selected. [11]

\*: Please click "Pairing" again after some seconds if no camera side units were displayed.

- All detected camera side units will be connected automatically.
- Camera side unit set by following settings will be connected.

	Settings	Status	MAC Address
[7] Delete	Registering	Connected	
Delete	Registering	Connected	
Delete	Registering	Connected	
[8] Add	-	-	

[9] Set Cancel

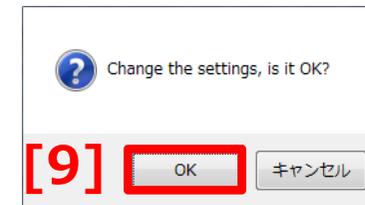

## Pairing function

Pairing function settings have been written to FLASH successfully.  
Click [Reset] button and restart the system to activate the new setup values.  
New settings will be validated after restart.

[10]

Reset

[11]

- All detected camera side units will be connected automatically.
- Camera side unit set by following settings will be connected.

	Settings	Status	MAC Address
[12] Delete	Registered	Connected	
Delete	Registered	Connected	
Delete	Registered	Connected	
Add	-	-	

Set Cancel

18. Turn off the power of receiver side unit.
19. Repeat the steps "2" to "18" for all receiver side units.
20. Turn on the power after completion for all receiver side units for usual operation.

Completed to configure manual pairing.

Note:

To add or replace the camera side unit(s), once return it to automatic pairing, then configure manual pairing again.

Please refer to the page "7" to "9" how to return to configure automatic pairing.

## <Configuring Automatic Pairing>

Ex. Connecting 3 units of WJ-PC200 with WJ-PR204.

1. Temporarily change the IP address assigned to your PC to access the coaxial-LAN converter's maintenance screen. Refer to page 2/10 of this document.
2. Connect the receiver side unit for back to automatic pairing with your PC by Ethernet cable.
3. Run web browser on your PC and key-in the IP address of the receiver side unit.  
Ex: Key-in http://192.168.249.249 at address bar if the IP address were factory default.
4. Key-in the user name and password, then click "OK" button.

Model no.	User name	Password
WJ-PR204	WJ-PR204	999999
WJ-PR201	WJ-PR201	999999

5. Click "Pairing" in maintenance screen. [1]
6. Select "All detected camera side units will be connected automatically." [2]
7. Click "Delete" button to the left of the MAC address of the camera side unit to be back to automatic pairing. [3]

**WJ-PR204**

Pairing Configuration

If you use Pairing function, you can configure the camera side units to allow connection to the receiver side unit. Please select radio button. And if you allow specified camera side units, please register the camera side units.

[Pairing Configuration]機能を使用してカメラ側機とレシーバ側機のペアリングを固定することができます。  
[Camera side unit set by following. ]にチェックを入れて、カメラ側機のMACアドレスを登録してください。

Note: When operating the "Back" or the "Refresh" button on the browser and clicking "Cancel" button, the settings while editing will be discarded.  
Note: Please separate six groups by hyphens "-", when Mac address is typed in. (e.g. BC-C3-42-\*\*-\*\*-\*\*)  
Note: Click the [Set] button to apply settings.

注: ブラウザの[戻る][更新]操作をしたり、[Cancel]ボタンをクリックすると、設定中の内容はクリアされます。  
注: MACアドレスを入力する際は、ハイフン“-”で区切って入力してください。  
(例: BC-C3-42-\*\*-\*\*-\*\*)  
注: 設定が完了したら、[Set]ボタンをクリックして設定内容を確定してください。


[1] Status  
Option  
**Pairing**  
Upgrade  
Restart  
Copyright


[2]  All detected camera side units will be connected automatically.  
 Camera side unit set by following settings will be connected.

	Settings	Status	MAC Address
<b>Delete</b>	Registered	Connected	
<b>Delete</b>	Registered	Connected	
<b>Delete</b>	Registered	Connected	
Add	-	-	

Set Cancel

8. Click "OK" button if a dialog is displayed. [4]

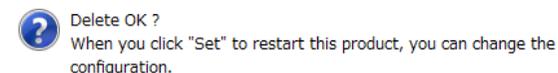
 Delete OK ?  
When you click "Set" to restart this product, you can change the configuration.

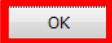[4]  

9. Repeat steps "7" and "8" for all camera side units to configure automatic pairing for the other camera side units.

10. Make sure all of Settings for the camera side units to be back to automatic pairing showing "Deleting". [5]


All detected camera side units will be connected automatically.  
 Camera side unit set by following settings will be connected.

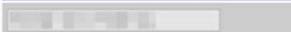	Settings	Status	MAC Address
 [5]	Deleting	Connected	
	Deleting	Connected	
	Deleting	Connected	
 [6]	-	-	<input type="text"/>

11. Click "Set" button. [6]

12. Click "OK" button if a dialog is displayed. [7]

 Change the settings, is it OK?  
[7]  

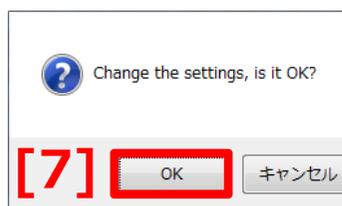13. Click "Reset" button if "Pairing function" screen is displayed. [8]

\*: The receiver side unit will be restarted automatically.

## Pairing function

Pairing function settings have been written to FLASH successfully.  
Click [Reset] button and restart the system to activate the new setup values.  
New settings will be validated after restart.

[8]



14. After restarting, click "Pairing", then make sure all of Settings for the connecting camera side units showing "Not Registered". [10]  
Also make sure "Camera side unit set by following settings will be connected." is selected. [9]

15. Turn off the power for the receiver side unit.

16. Repeat the step "2" to "15" for the other receiver side units.

[9]

All detected camera side units will be connected automatically.  
 Camera side unit set by following settings will be connected.

[10]

	Settings	Status	MAC Address
<input type="button" value="Add"/>	Not Registered	Connected	[MAC Address]
<input type="button" value="Add"/>	Not Registered	Connected	[MAC Address]
<input type="button" value="Add"/>	Not Registered	Connected	[MAC Address]
<input type="button" value="Add"/>	-	-	[MAC Address]

Completed back to configure automatic pairing.

## <How to upgrade firmware>

Ex: Upgrading firmware from version 1.031cM to the latest.

Make sure you download the latest version of the Coaxial-LAN Converter firmware from the Panasonic web site at;

<http://security.panasonic.com/download/>

1. Click "Upgrade" button on maintenance screen. [1]
2. Click "Brows" button, select the file of firmware, then click "Open". [2]
3. Click "Start" button. [3]
4. Click "OK" button when prompted.
  - The firmware will be updated, and then the adapter will automatically restart. After restarting, the updated firmware is used.
5. Make sure the firmware version is latest at STEP 6 in page 3/10.

