

July, 2018

## Information on switching images between color and black/white

Depending on the environment, switching of the camera image from color to black/white (b/w) and/or from b/w to color may not work as desired.

In that case, you can change the color image and b/w image by specifying the time using the schedule function, and the procedures are described as follow.

Applicable models: i-pro EXTREME series


(However, the following models are NOT covered: WV-S2130/S2110/S4150/X4171)

- Example of setting: Switch to black and white image at 6 p.m. (18 o'clock), color image at 7 a.m. (7 o'clock).

This document shows the setting screen of WV-S2131L as an example. So, refer to the operating instruction manual of your camera for the other model.


1. Open the settings of scene file in Scene registration

From the "Image quality" tab on the "Image / Audio" page of the setting screen, click "Setup" in "Image adjust".

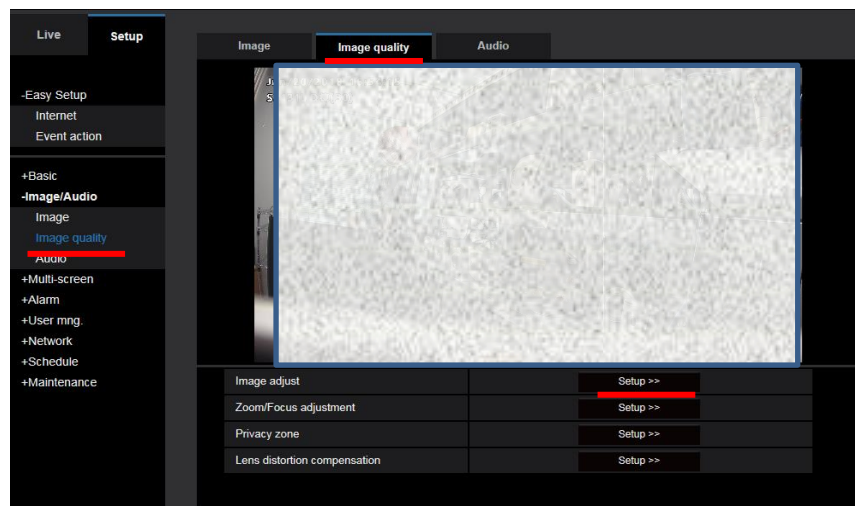


2. Register scene file when Day & Night is on

Register "On (IR Light Off)" or "On (IR Light On)" in the setting of "Day & Night" to "Scene file 1" as the name of "BW ON", shown as follow. (You can set any name.)

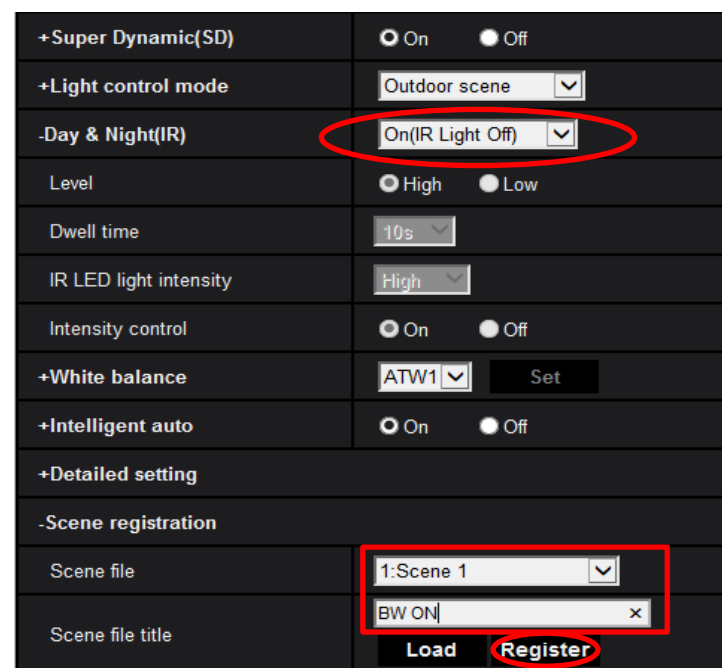

3. Register scene file when Day & Night is off


Set Day & Night switching Off as "Scene file is not applied", shown as follow.

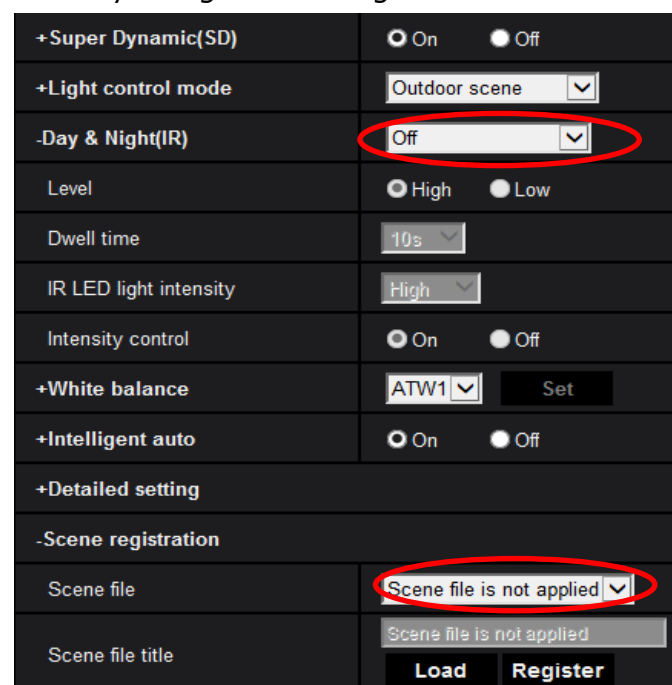

4. Schedule registration of scene file

- On the "Schedule" page, register the time for "Day & Night ON".

(Black and white ON from 18 o'clock every evening to 7 o'clock every morning, and any other times are set to "Scene file is not applied" as follows.)

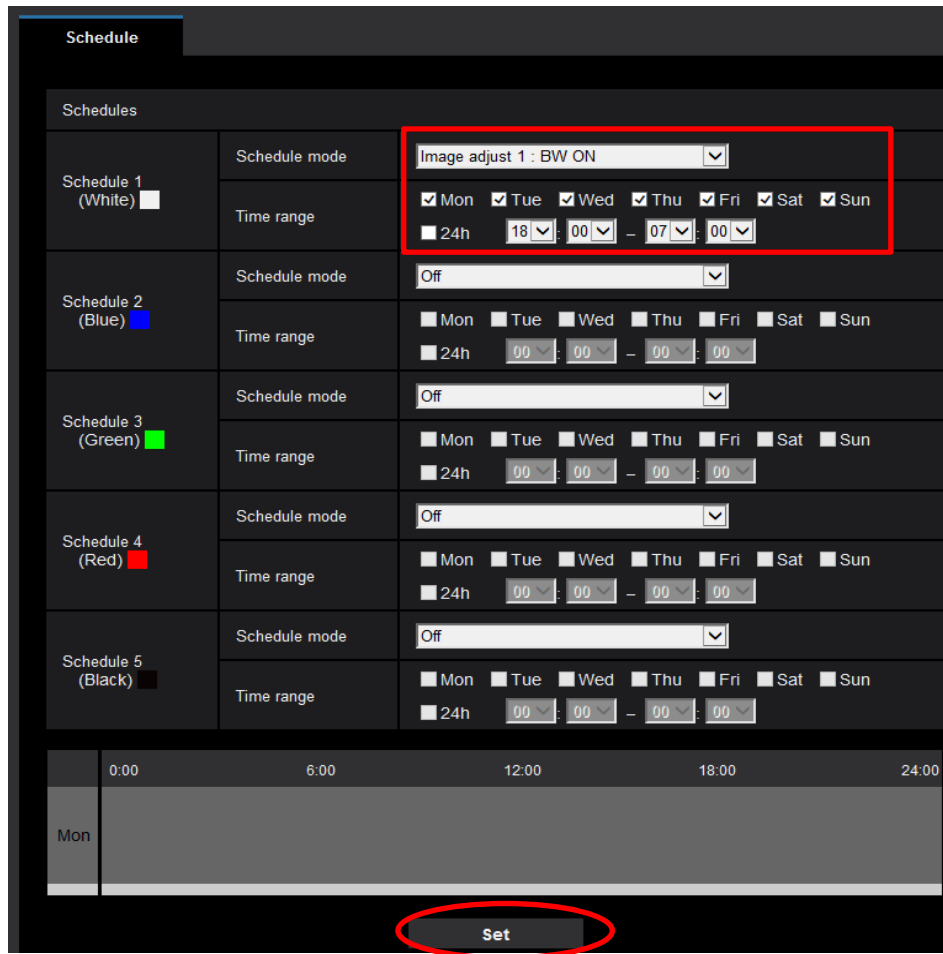

This completes the setting.