

360-degree Fisheye Camera Installation for Double Panorama

Updated: November 17, 2021

Issued: February 2, 2021

Panasonic i-PRO Sensing Solutions Co., Ltd.

360-degree Fisheye Camera Installation for Double Panorama **i-PRO**

- Introduction

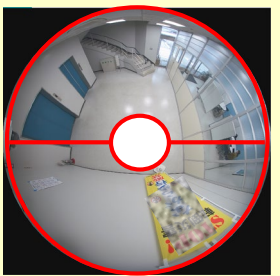
This article describes points to note when installing the below 360-degree Fisheye Network Camera as a replacement for a conventional 360-degree Fisheye model.

Applicable model: WV-X4173, WV-S4151, WV-S4551L(M), WV-X4172, WV-X4573L(M), WV-S4156, WV-S4556L(M), WV-S4176, and WV-S4576L(M)

When "Double panorama" is selected for [Image capture mode] in the above applicable models, the center of its image will be shifted by 45 degrees compared to the conventional models. Therefore, it is necessary to shift the camera in advance by turning the attachment plate 45 degrees at installation, as shown on the next page. (Position adjustment in units of 90 degrees is possible after installation)

Conventional model

Fisheye mode

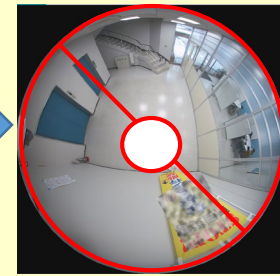


Double panorama mode



Applicable model

Fisheye mode



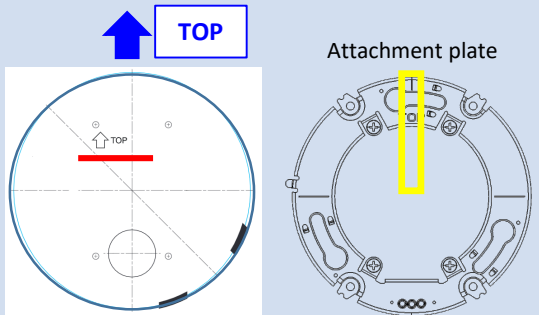
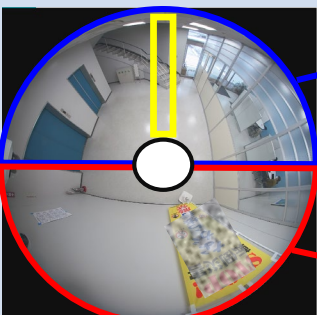
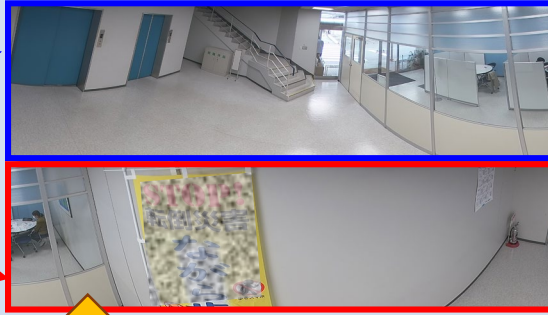
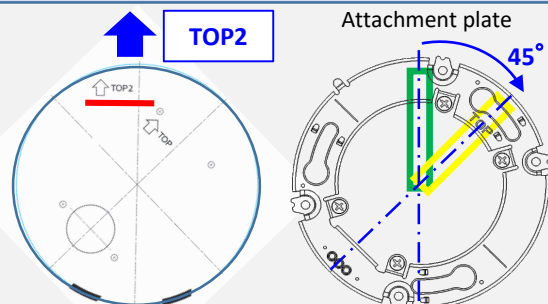
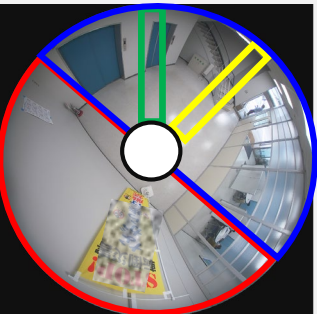
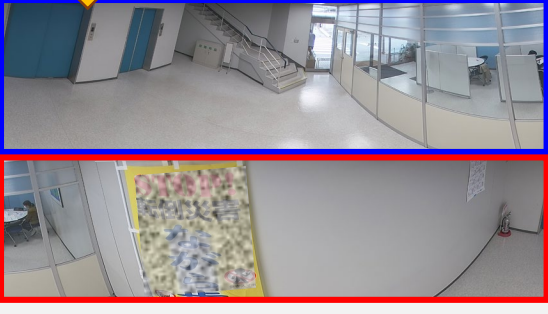
Same as the conventional model

Double panorama mode



Approx. 45 degrees shifted from the center

360-degree Fisheye Camera Installation for Double Panorama **i-PRO**

	Installation	In Fisheye mode	In Double panorama mode
<p>Conventional models</p> <ul style="list-style-type: none"> WV-X4170 WV-X4171 WV-X4571L(M) WV-S4150 WV-S4550L(M) WV-SW458MA 	 <p>Attachment plate</p>	 <p>Top image</p> <p>Bottom image</p>	
<p>Applicable models</p> <ul style="list-style-type: none"> WV-X4173 WV-S4151 WV-S4551L(M) WV-X4172 WV-X4573L(M) WV-S4156 WV-S4556L(M) WV-S4176 WV-S4576L(M) <p>Align "TOP2" with the upper direction of the screen at installation. The same applies to when using a base bracket for outdoor models.</p>	 <p>Attachment plate 45°</p>	 <p>Image turns 45 degrees to the right</p>	 <p>Same image as conventional model</p>

-PRO