


On the striped pattern (moiré) phenomenon at the time of reducing the display screen

Stripe (moiré) phenomenon may appear as below when shrinking in browsers or when displaying with reduced resolution display

**striped pattern (moiré)**

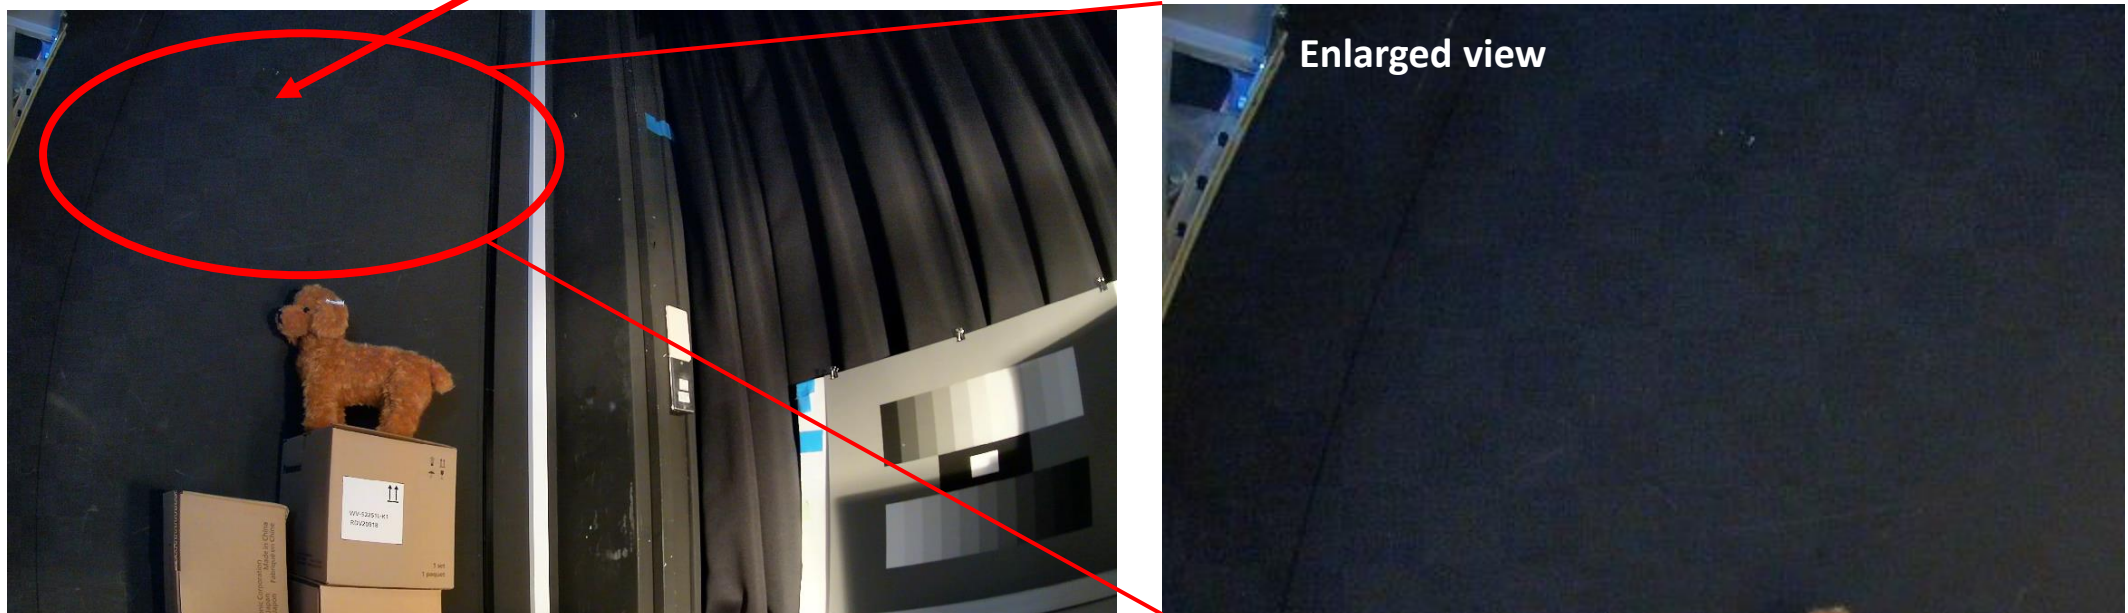

Cause : It is an interference fringe caused by a difference in the size (resolution) of the captured image and the display screen. It is not a malfunction of the camera because it is generated in principle by interference.

Coping : It is possible to reduce by changing the size of the display screen or the shooting angle of view (zoom ratio / camera direction). Also, it is possible to reduce by reducing "aperture level (contour correction)" in the camera setting.

Note: Resolution will decrease.


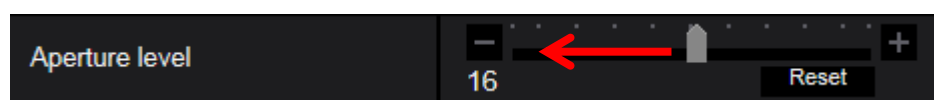


Image quality adjustment screen



How to resize the display screen

1. Grab the "corner" of the window with the mouse, left click and hold the button, then change size slightly and release.
2. Click the update button to update the information.

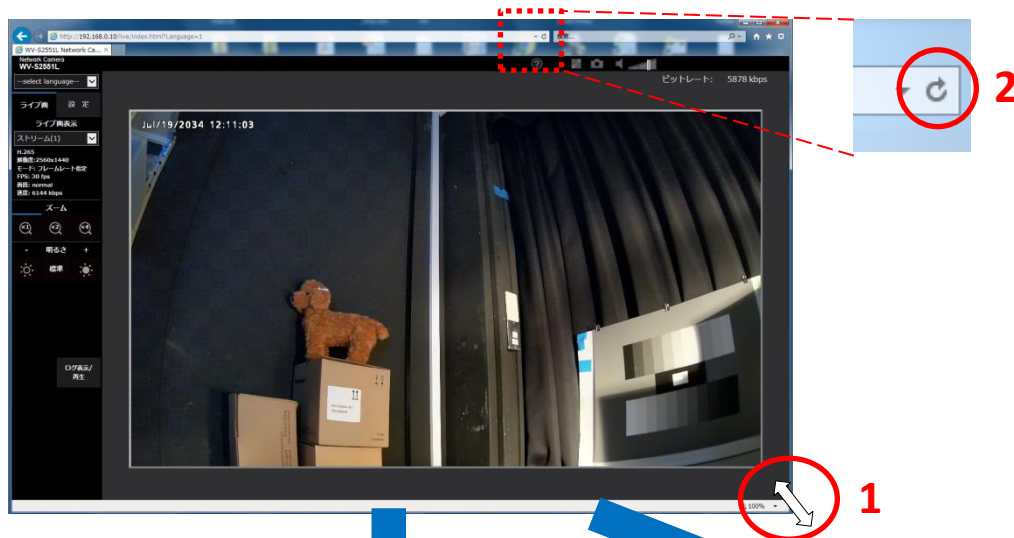

When expanded

When shrunken

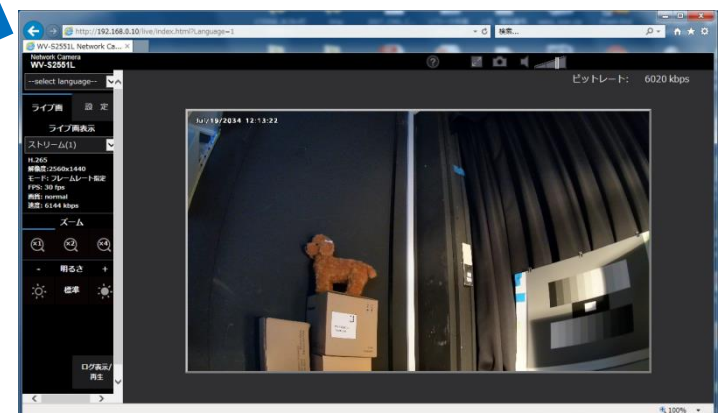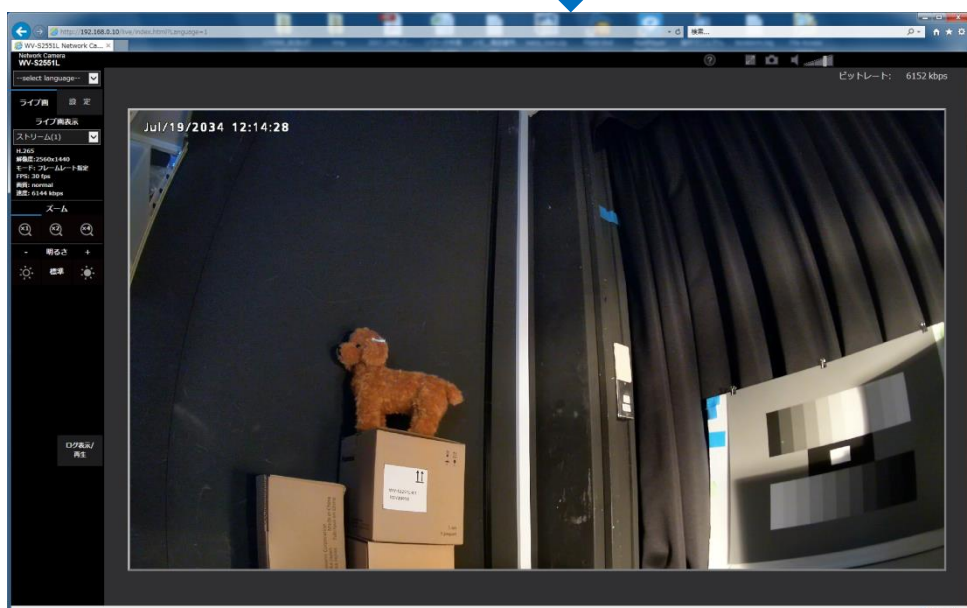

If moiré is not reduced, repeat steps 1 and 2 to change the size of the window.